




# Eureka 1660SP Dust Cup Replacement

This guide will show you how to replace the dust cup filter of the Eureka 1660SP.

Written By: Nikhila Vijaybhaskar

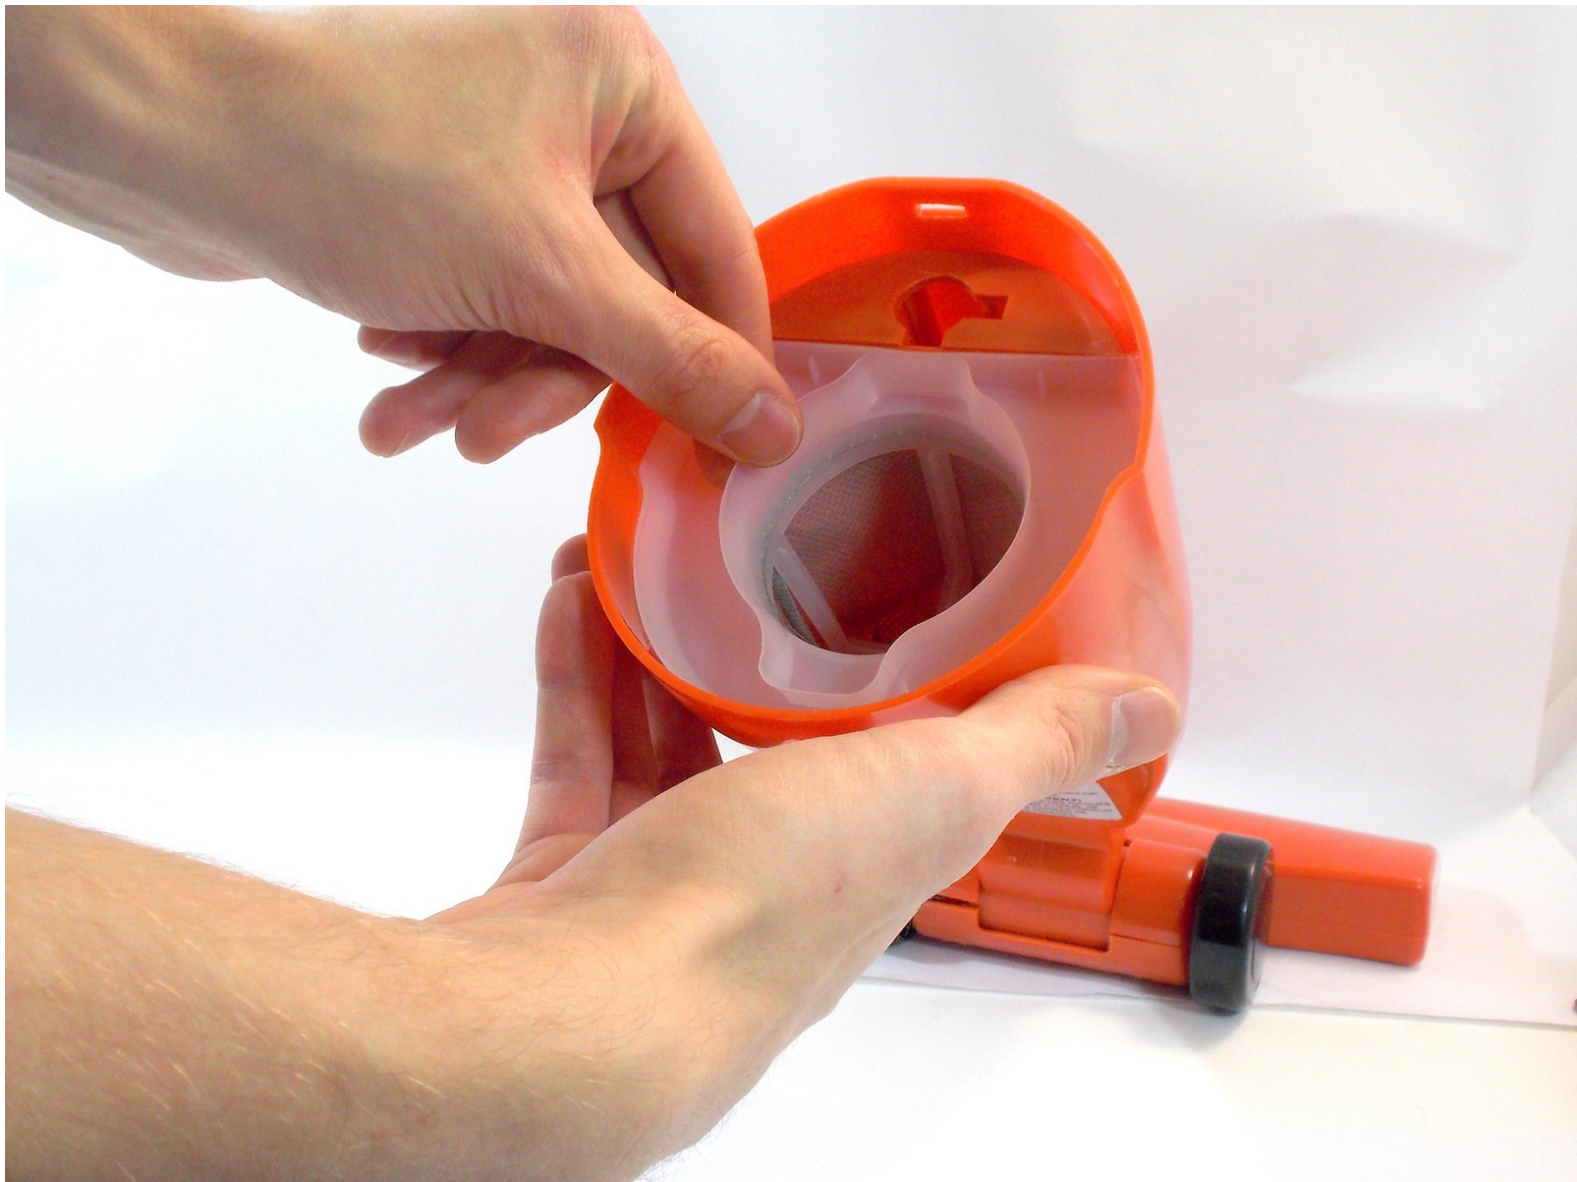

## INTRODUCTION

Your vacuum's dust cup will fill up after prolonged use. You need to replace this dust cup for maximum efficiency. This guide will show you how to do this replacement in just a few minutes!

---



### PARTS:


- [Dust cup](#) (1)
-

## Step 1 — Dust Cup



- Press the black separator switch and lightly pull the bottom half away from the top.
- Remove the screws shown in the picture.

## Step 2

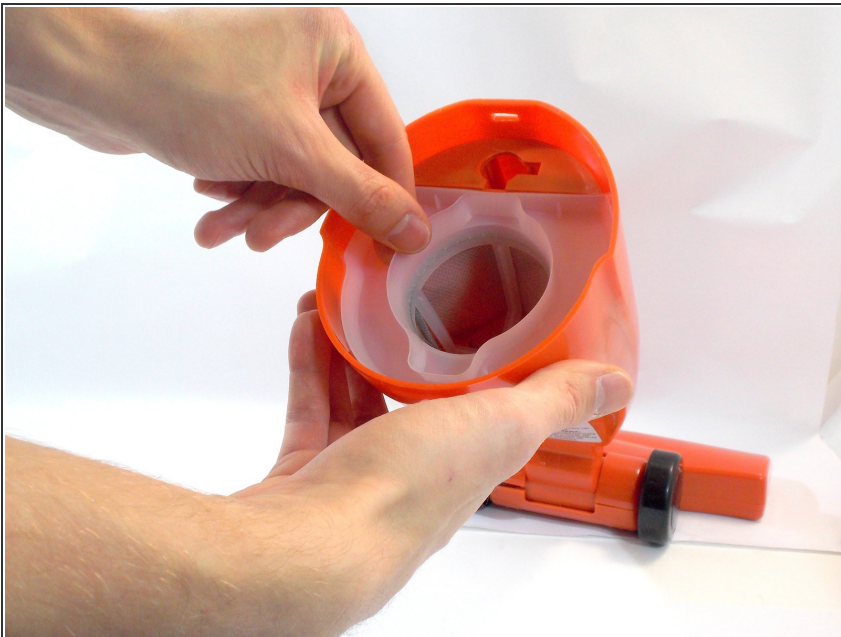

- You can now see the dust cup in the bottom half of your vacuum.




### Step 3



- Lift the dust cup out to remove it.

### Step 4

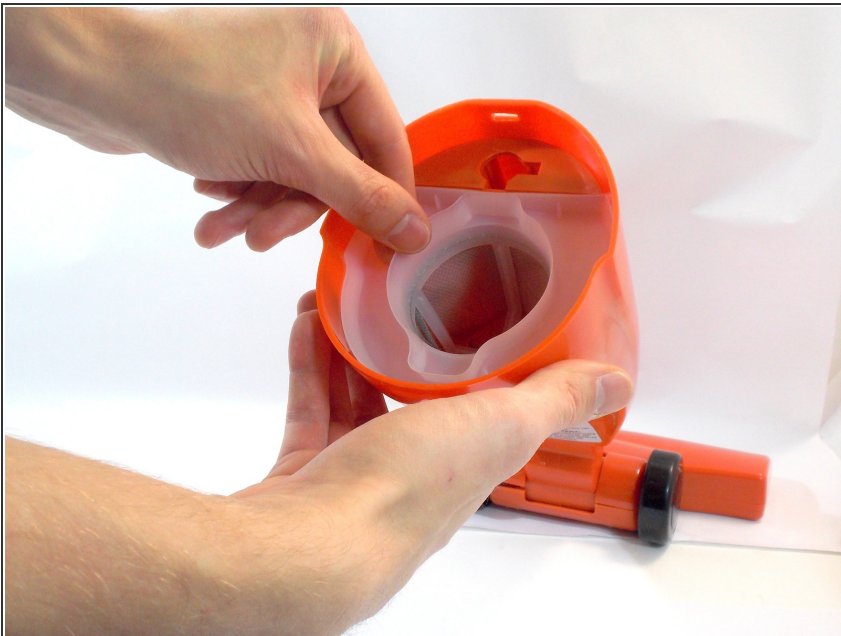

- Slot the new dust cup back into the cavity.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 02:08:35 PM.